

# NINJA®

## QB3001ANZ

OWNER'S GUIDE

### FIT



AU [ninjakitchen.com.au](http://ninjakitchen.com.au)  
NZ [ninjakitchen.co.nz](http://ninjakitchen.co.nz)

**THANK YOU**  
for purchasing your Ninja® Fit

**REGISTER YOUR PURCHASE**

 **AU** [ninjakitchen.com.au](http://ninjakitchen.com.au)  
**NZ** [ninjakitchen.co.nz](http://ninjakitchen.co.nz)

**RECORD THIS INFORMATION**

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_  
(Keep receipt)

Store of Purchase: \_\_\_\_\_

**TECHNICAL SPECIFICATIONS**

Voltage: 220-240V~, 50-60Hz

Power: 700 Watts

**CUP CAPACITY:**

470 ml




**PLEASE READ CAREFULLY AND  
KEEP FOR FUTURE REFERENCE.**

**CONTENTS**

**Important Safeguards..... 4**  
**Getting to Know Your Ninja® Fit ..... 6**  
**Before First Use ..... 6**  
**Blending Instructions ..... 7**  
**Care & Maintenance..... 8**  
Cleaning ..... 8  
Storing..... 8  
Resetting the Motor Thermostat..... 8  
**Troubleshooting Guide..... 9**  
**Replacement Parts ..... 9**  
**Product Registration..... 9**  
**Warranty ..... 10**

# IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

	<b>Read and review instructions for operation and use.</b>
	<b>Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.</b>
	<b>For indoor and household use only.</b>
<b>When using electrical appliances, basic safety precautions should always be followed, including the following:</b>	

## ⚠ WARNING

**To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.**

- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 3 **ALWAYS** exercise care when handling the Blade Assembly. The blades are sharp. **ONLY** grasp the Blade Assembly by the outer perimeter of the blade assembly base. Failure to use care when handling the blade assembly will result in a risk of laceration.
- 4 Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
- 5 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 6 Turn the appliance **OFF**, then unplug the appliance from the socket when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the socket. **NEVER** unplug by grasping and pulling the flexible cord.
- 7 Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- 8 Blades are sharp. Handle carefully.
- 9 To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- 10 **DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- 11 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for servicing.
- 12 **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical socket; instead grasp the plug and pull to disconnect.
- 13 Extension cords should **NOT** be used with this appliance.
- 14 **DO NOT** allow children to operate this appliance, to play with it, or use as a toy. Keep the appliance and its cord out of reach of children.
- 15 This appliance is **NOT** intended to be used by people (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 16 Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- 17 **DO NOT** attempt to sharpen blades.
- 18 Keep the appliance and its cord out of reach of children.

 
 
- 19 **DO NOT** allow the unit or the cord to hang over the edges of tables or worktops. The cord may become snagged and pull the appliance off the work surface.
- 20 **DO NOT** allow any part of the unit to contact hot surfaces, including stoves and other heating appliances.
- 21 **ALWAYS** use the appliance on a dry and level surface.
- 22 **NEVER** place a blade assembly on the motor base without it first being attached to its corresponding container (bowl, pitcher, cup) and lid.
- 23 **ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 24 The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.  
**DO NOT** use stainless steel cup accessory model XSKDWSS24 with blender.
- 25 During operation and handling of the appliance, avoid contact with moving parts.
- 26 **DO NOT** operate the appliance with an empty container.
- 27 **DO NOT** fill containers past the **MAX FILL** or **MAX LIQUID** lines.
- 28 **DO NOT** microwave any containers or accessories provided with the appliance.
- 29 **DO NOT** perform grinding operations with the Single-Serve Cup and Blade Assembly.
- 30 Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- 31 Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
- 32 **NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
- 33 **DO NOT** expose the containers and accessories to extreme temperature changes. They may experience damage.
- 34 **NEVER** leave the appliance unattended while in use.
- 35 **DO NOT** blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- 36 **DO NOT** remove the cup from the motor base while the appliance is running.
- 37 Remove the Blade Assembly from the Single-Serve Cup upon completion of blending. **DO NOT** store ingredients before or after blending them in the cup with the blade assembly attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. For ingredient storage in the cup, use only Sip & Seal™ Lid to cover.
- 38 The maximum wattage rating for this appliance is based on the configuration of the Blade Assembly and Single-Serve Cup. Other configurations may draw less power or current.
- 39 Max **ON** time is 1 minute under 900W load. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 30 minutes before using again.
- 40 **DO NOT** process dry ingredients without adding liquid to the Single-Serve Cup. The Single-Serve Cup is not intended for dry blending.
- 41 To protect against risk of electrical shock, **DO NOT** immerse the motor base in water or other liquid.
- 42 **DO NOT** spray the motor base with any liquids. Turn off and unplug the motor base before cleaning.
- 43 The maximum wattage rating for this appliance is achieved by chopping 120 g beef in the 470 ml (16 oz.) cup for 5 seconds.

## SAVE THESE INSTRUCTIONS

# GETTING TO KNOW YOUR NINJA® FIT

## MAIN UNIT

- A** Motor Base  
(attached power cord not shown)
- B** Sip & Seal™ Lid (x2)
- C** 470 ml Single-Serve Cups (x2)
- D** Ninja Blade Assembly

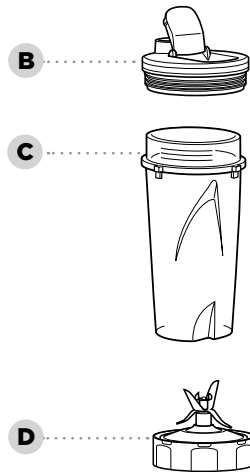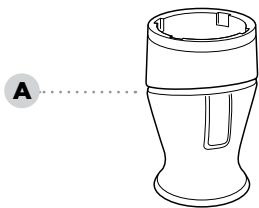

To order additional parts and accessories, visit:

**AU** [ninjakitchen.com.au](http://ninjakitchen.com.au)  
**NZ** [ninjakitchen.co.nz](http://ninjakitchen.co.nz)

## BEFORE FIRST USE

### DID YOU KNOW?

- You can take your drinks on the go using the Sip & Seal Lids.
- The containers, blade assemblies, and lids are BPA free and dishwasher safe.

**NOTE:** All attachments are dishwasher safe. It is recommended that the lids, containers and blade assemblies be placed on the top rack of the dishwasher. Ensure blade assemblies and lids are removed from their containers before placing in the dishwasher. Exercise care when handling blade assemblies.

 
- 1** Remove all packaging materials from the appliance. Exercise care when unpacking blade assemblies. All blade assemblies are sharp.
- 2** Wash containers, lids, and blade assemblies in warm, soapy, water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assemblies, as the blades are sharp.
- 3** Thoroughly rinse and air-dry all parts.

**NOTE:** Handle the blade assembly by grasping it around the perimeter of the base.



# BLENDING INSTRUCTIONS




- 1** Add ingredients to the Single-Serve Cup. **DO NOT** add ingredients past the **MAX LIQUID** line on the cup.

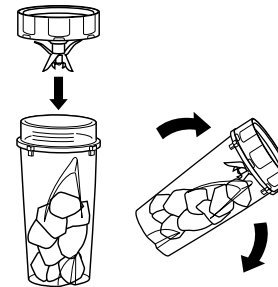

  - 2** Place the blade assembly on the top of the cup and turn clockwise to seal.
- 3** Turn cup upside down so the bottom of the blade assembly is flat on the worktop.
- 4** Place the cup upside down on the motor base. Press down on the cup to pulse or blend.

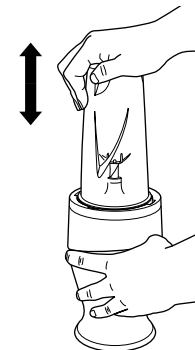

 - 5** When blending is complete, lift up the cup to remove.

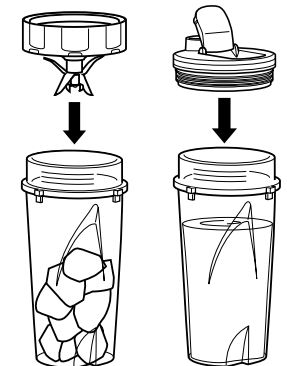

- 6** Turn cup over so blade assembly is on top. Twist blade assembly anti-clockwise to remove. To take your blended contents on the go, place the Sip & Seal Lid on cup and turn clockwise to seal. Do not store with the blades attached.

## CARE & MAINTENANCE

### CLEANING

- 1 Separate all parts.
- 2 Wash all containers in warm, soapy water with a soft cloth.
- 3 **Hand-Washing**  
Wash cups, lids, and blade assembly in warm, soapy water. Use a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling the blade assembly as the blades are sharp. Thoroughly rinse and air-dry all parts.

#### Dishwasher

Cups, lids, and blade assembly are dishwasher safe. Place the cups, lids, and blade assembly on the top rack of the dishwasher **ONLY**. Ensure the blade assembly and lid are removed from the cup before placing in the dishwasher.

#### Motor Base

Turn off the unit and unplug the motor base before cleaning. Wipe motor base with a clean, damp cloth.

**NEVER** directly spray the base with water or other liquids.

**DO NOT** use abrasive cloths/pads/brushes to clean the base, as this can dull or scratch the surface.

### RESETTING THE MOTOR THERMOSTAT

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload it. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

- 1 Unplug the unit from the socket.
- 2 Allow the unit to cool for approximately 30 minutes.
- 3 Remove the container's lid and blade assembly. Empty the container and ensure no ingredients are jamming the blade assembly.

**IMPORTANT:** Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

## TROUBLESHOOTING GUIDE

**WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.**

#### Motor doesn't start or blade assembly doesn't rotate

- Make sure the cup is securely placed onto the motor base.
- Check that the plug is securely inserted into the socket.
- Check fuse or breaker in your home. Replace the fuse/reset breaker.
- Check that the inside of the motor base is clean and there is no food blocking the connection between the motor base and the cup.
- There is too much food in the container. Unplug the motor base. Remove some food and try again.
- The unit has overheated. Unplug and wait approximately 15 minutes before using again.

#### Food collects on the sides of the cup

- Too much food is being processed at one time. Turn the motor base off. When the blades stop rotating, remove the cup from the motor base. Remove some of the food being processed.

#### Cannot make snow from ice

- Do not use ice that has been sitting out or has started to melt.
- Be sure to use short pulses in the beginning to break up large pieces.

## REPLACEMENT PARTS

To order additional parts and attachments, visit **AU** [ninjakitchen.com.au](http://ninjakitchen.com.au) | **NZ** [ninjakitchen.co.nz](http://ninjakitchen.co.nz).

## PRODUCT REGISTRATION

Please visit **AU** [ninjakitchen.com.au](http://ninjakitchen.com.au) | **NZ** [ninjakitchen.co.nz](http://ninjakitchen.co.nz) to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

## ONE (1) YEAR LIMITED REPLACEMENT WARRANTY

For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase. This warranty does not replace but is in addition to your statutory rights.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- For New Zealand Consumers: We will replace the defective/faulty part with a new product, free of charge, or if the unit is deemed defective/faulty we replace the unit with an equivalent or upgraded model, at our discretion.
- For Australian Consumers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase. Please note:

### Your warranty is subject to the following conditions

- DO NOT operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident

### What is not covered?

- Accessories supplied with the item.
- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.

### Customer costs within warranty

The customer is responsible for any inwards freight charge to return a product for warranty if requested, and outward freight charge for warranty parts and or replacement unit.

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---



---



VISIT US ONLINE AT:

**AU** [ninjakitchen.com.au](http://ninjakitchen.com.au) **NZ** [ninjakitchen.co.nz](http://ninjakitchen.co.nz)

Or follow us on any of our social media pages:

  @ninjakitchenapac

**Mann&Noble Pty Ltd**  
**Building D, 33 Quarry Road**  
**Erskine Park NSW, Australia, 2759**  
**AU 02 8801 7666 | NZ 0800 112 660**  
**AU [ninjakitchen.com.au](http://ninjakitchen.com.au) | NZ [ninjakitchen.co.nz](http://ninjakitchen.co.nz)**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark of SharkNinja Operating LLC.

SIP & SEAL is a trademark of SharkNinja Operating LLC.

© 2021 SharkNinja Operating LLC.

PRINTED IN CHINA

QB3001ANZ\_IB\_MP\_Mv6

